
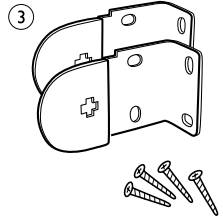
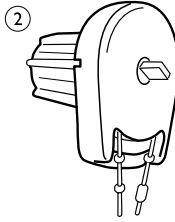


Self-fit roller blind - Assembly and fitting instructions

A Pack contents

This pack contains:

- 1 Spring Loaded End Plug
- 2 Sidewinder
- 3 Fixing Brackets & Screws
- 4 Plastic End Caps
(not applicable for straight edge blinds)

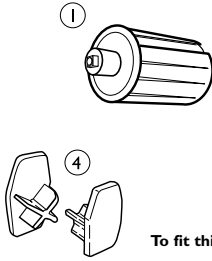


To fit this blind you will need: pencil, ruler, tape measure, small hacksaw, scissors, screw driver, drill.

B Fixing the brackets


For inside recess fixing, screw brackets to window frame.
For outside recess fixing, screw brackets to wall allowing 51mm (2") clearance on each side and above window recess.

Note: Check brackets are level using the ruler or your blind may hang crooked.

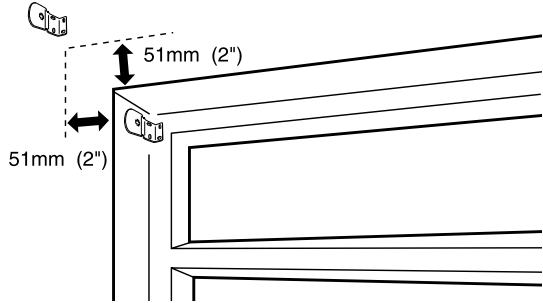


C Measuring the gap between the brackets

Mark out this measurement less 25mm (1") onto the roller, and draw a dotted line down the full length of the fabric (on the reverse side).

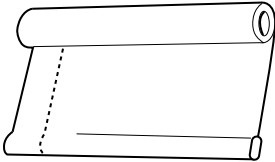

D Trimming width of blind


Slide rail to the side exposing fabric to be trimmed off ①
Cut the fabric and roller to size marked. ① and ②
Mark bottom rail and cut to same size as fabric.
Slide the rail back into position.

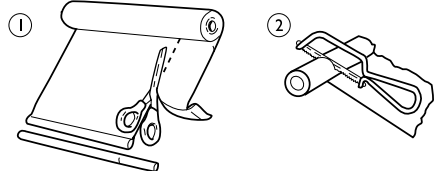

Note: If the blind has a symmetrical pattern or detailing it is advisable to trim equal amounts off each side.

E Fitting end plug and side winder

Decide whether you require the cord to hang on the left or right hand side. With roller and trim facing you insert the spring loaded end into the chosen side of the roller, ensuring that the cord connection piece is at the top back. Insert the sidewinder end into the other side of the roller.

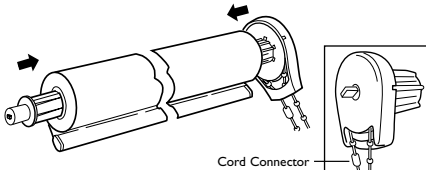

F Fitting the blind into the brackets

For both top and side fixing, clip spring loaded end of roller onto bracket first, then push blind towards sprung end to clip cord sidewinder end onto bracket.

SAFETY WARNING — PLEASE KEEP SMALL PARTS AWAY FROM CHILDREN