

Tester Accessories

MasterBox 3/RCD. To enable Testing of 3 Phase RCD's on Phase 1, 2 & 3 in conjunction with Single Phase RCD Testers. This unit can also be used as a 3 Phase to Single Phase Converter with Selectable Switch taking power from Phase 1, 2 or 3



MasterBox 3/RCD



Adapt-213/10/3



Adapt-213/10/2

Pair of Test Leads for Testing 3 Core 10A Flat Connector Leads in conjunction with our Earth Flash Test Box and a PAT Tester. Continuity and Polarity can then be checked by Plugging lead into Mains and using a Socket and See IEC Lead Tester.

Pair of Test Leads for Testing 2 Core 10A Flat Connector Leads in conjunction with our Earth Flash Test Box and a PAT Tester. For 2 Core Leads you will also require the ADAPT-213/213/2. Continuity can then be checked by disconnecting ADAPT 213/213/2, Plug lead into Mains and using a Socket and See IEC Lead Tester which will show an Earth Fault as the Lead has No Earth Wire.



MasterBox 3 Lead

MasterBox for Testing C19 IEC, Figure 8 and Cloverleaf Power Leads. Supplied with Short IEC Lead to IEC to Connect to our Earth Flash Test Unit, and an Adapter lead used only for Flash and or DC Insulation Tests on 2 Core Cables to connect to PAT Testers (This Lead is wired Earth and Neutral in the Plug and Live and Neutral in Socket). After the Insulation Tests this Adapter Should be removed and the Lead under test should be plugged directly into the Mains, the Socket end into the Masterbox and the IEC lead connected to an IEC Socket and See Test to check Continuity. This will show an Earth Fault as there is no Earth Wire in the Lead. Each input has its own IEC Output Socket



Adapter ONLY for allowing Insulation and Flash Testing 2 Core Extension Leads in Conjunction with other Adapter/Test Leads Available