

## Focus BST and GMT daylight saving settings for HRX1000, HRX3000 and HRX5000 proximity card terminals

The HRX master terminal will normally update its BST and GMT settings automatically as each new daylight saving date is reached. However there are some circumstances when the settings may be incorrect – following a firmware upgrade for example.

We recommend that the settings are checked and adjusted, during the run up to each daylight saving date. Information about these dates can be found at: <a href="http://wwp.greenwichmeantime.com/">http://wwp.greenwichmeantime.com/</a>

It is very easy to check the settings and make adjustments if necessary.

This guide will step through the procedure.

If you have any questions relating to daylight saving, then please feel free to contact us as <u>info@egress-sys.co.uk</u>

## EGRESS SYSTEMS INSTRUCTION SHEET: INST009-13



# Step 1:

From within Focus, click on *System* and then *Clock Utilities* from the menu bar.

ices	<u>U</u> ser	Sys	em <u>H</u> elp	I	,						
			<u>A</u> rchive								
9			Audit <u>L</u> og		<b>22</b>						
endar Repo Import			Watch								
lock	Utili <u>C</u> lock Utilities										
	>		Eire Alarm Setup								
		Ð	j <u>S</u> ystem Setup								
		8	<u>U</u> ser Setup		Clock Utilities						
		6	C <u>o</u> nnections		Clock		Master				
		<b>4</b>	<u>B</u> ackup/Restore								
						(HR)	( Termina	al ———			
							F	Firmware			
							Τe	erminal ID			
							Employee Capacity				
							Employee	es Used			
					Cle	ockings to Do	wnload				
							Date		•		
					Мі	nimum In/Out	minutes	~			
							Maximum Sh	ift Hours	~		
						Next BS	6T starts		-		
				Next GMT starts							
					G	et Status from	Clock	Sen	d to Clock		
- Time											
							Time	00:00:00	Set	Time	
Status Employees Upgrade Download TCP/IP Bells Ad								lls Access Control			

# Step 2:

If it is not already visible, select the name of the required terminal from the drop down list labelled *Clock:* 

Clock	Master	*	Connection Setup
	Master		
	Slave		

2

### EGRESS SYSTEMS INSTRUCTION SHEET: INST009-13



#### Step 3:

Click on the *Get Status from Clock* button. This should then populate the remaining fields:

Clock Utilities									
Clock	Master	Connection Setup							
-HRX Terminal									
	Firmware	Rev 2.022							
	Terminal ID	1043							
	Employee Capacity	50							
	Employees Used	0							
Ck	ockings to Download	0							
	Date	22/09/2005 -							
Mi	nimum In/Out minutes	2 💌							
	Maximum Shift Hours	18 💌							
	Next BST starts	30/03/2008 -							
	Next GMT starts	28/10/2007 -							
G	et Status from Clock	Send to Clock							
	Time 06:44:01	Set Time							
Status Employees Upgrade Download TCP/IP Bells Access Control									

#### EGRESS SYSTEMS INSTRUCTION SHEET: INST009-13



#### Step 4:

Ensure the value for Next BST Starts is correct. e.g. 27/03/2011.\*

Ensure the value for Next GMT Starts is correct. e.g. 31/10/2010.\*

If both dates are correct, then no further action is required.

\*Information about these dates can be found at: <a href="http://wwp.greenwichmeantime.com/">http://wwp.greenwichmeantime.com/</a>

If either of these values are wrong, then enter the correct date (clicking on the arrow at the end of each field, opens up a calendar that may be used to select the required date). Once both dates have been corrected, click on *Send to Clock* button.

20/10/10

4