
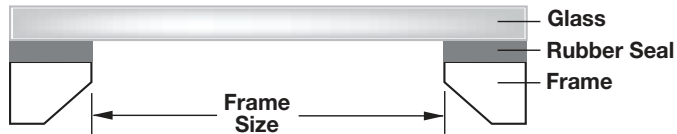


# EZ FIT WINDOW BLINDS

## MEASURING AND FITTING INSTRUCTIONS

**EZ FIT** Pleated Blinds can be fitted to most windows that have an internal rubber seal. It is important to measure as accurately as possible (especially the width).

### MEASURING INSTRUCTIONS

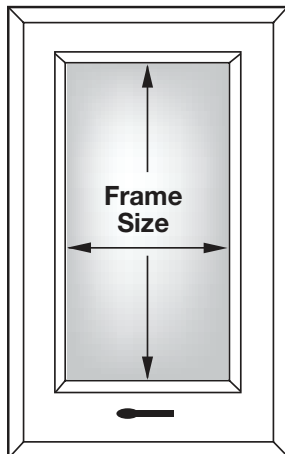

The blind is designed to fit inside the frame. Measure the exact frame\* width and drop.


\* If the rubber seal is visible in from the frame, measure the visible glass size.

### FITTING INSTRUCTIONS



#### STEP 1

Clip the EZ Fit Bracket into the insertion tool and push bracket into the frame between the glass and the rubber seal.

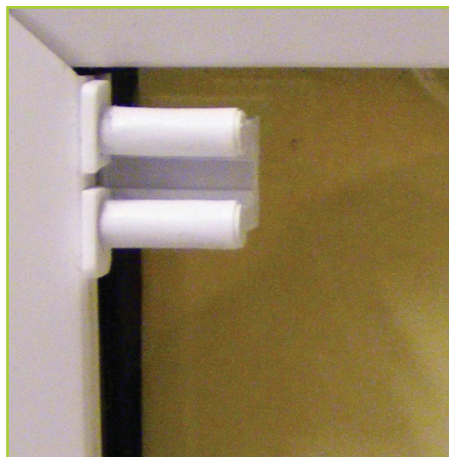


#### STEP 2

Fit the EZ Fit Brackets into the four corners of the frame.

#### USEFUL TIPS

- It helps installation if you smear a little washing up liquid onto the bracket.
- Use a flathead screwdriver and hammer to tap brackets right in to corners of the frame.

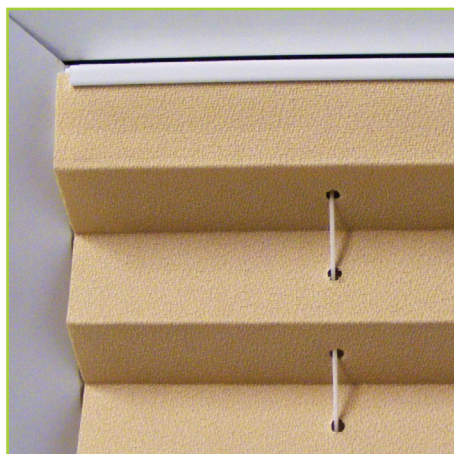

#### STEP 3

Clip the top rail of the blind onto the brackets and repeat procedure for bottom rail.



#### STEP 4

The tension of the blind has been pre-set by the factory. However, if less or more tension is required, unclip bottom rail and adjust cord on locking clamp on the reverse side of rail.