Room darkening skylight Rollerblind

Components Rollerblind
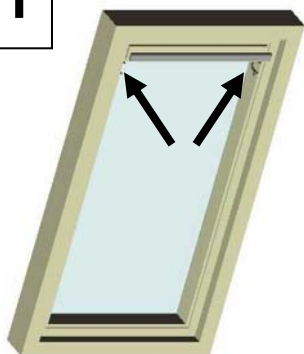
12x   6x
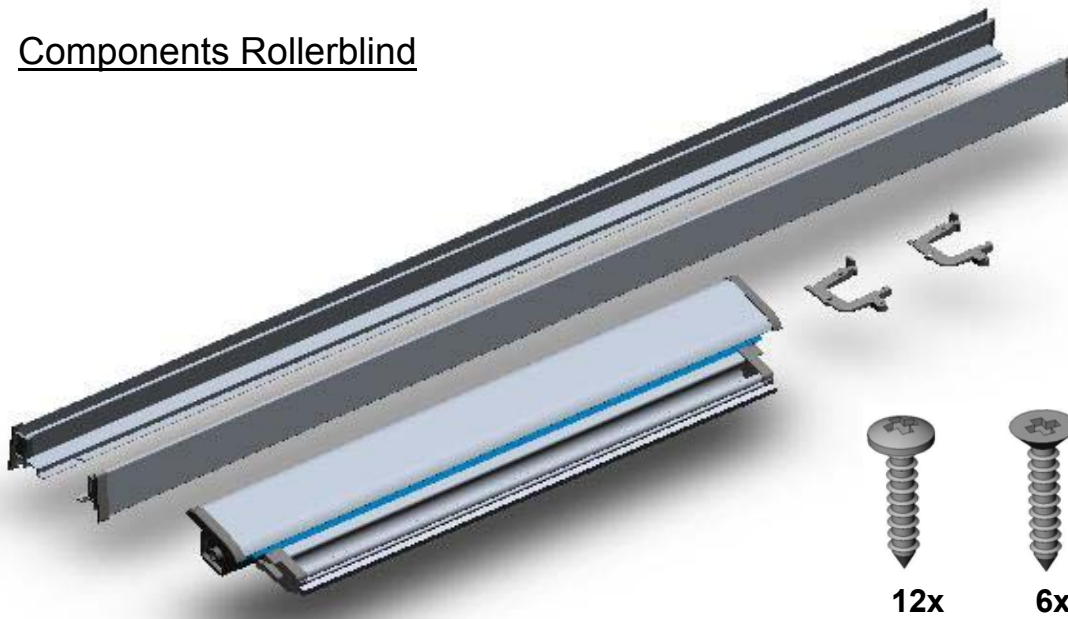
Required tools
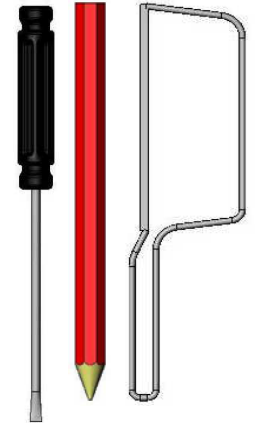
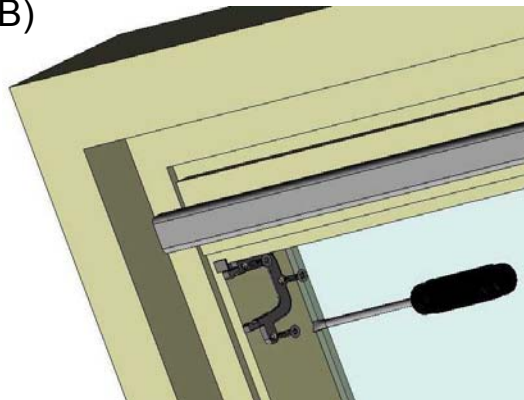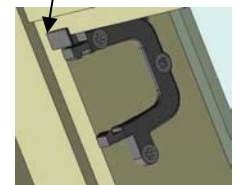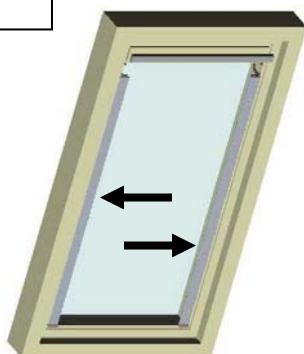## Assembly order (step 1 to 3)
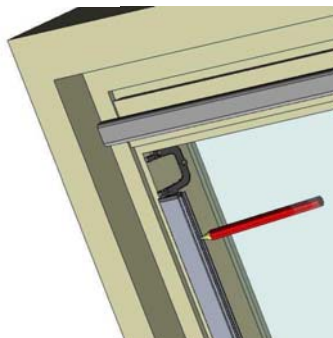
Mounting the brackets

1

A)
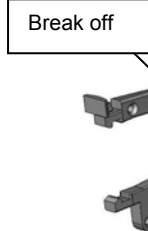
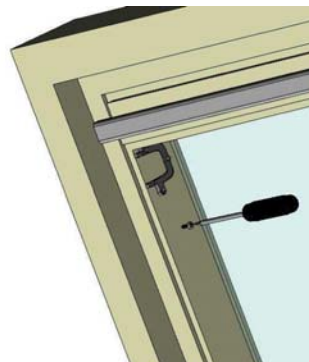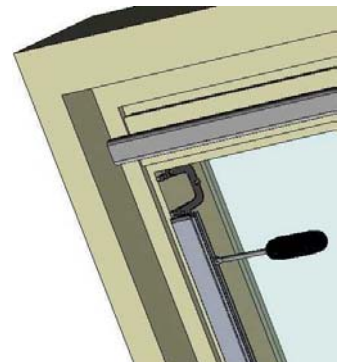Break off

B)

C)

Break off after assembly

Mounting the guides

2

A)

B)

C)

Mounting the cassette

3

A) Aluminium up

Pull, then move slowly back until the blind blocks

B) Tip over bottom bar to mount in profile

C) Unlock by pulling out 1cm

Pull bottom bar in order to fix bottom bar

D) Click the cassette in brackets
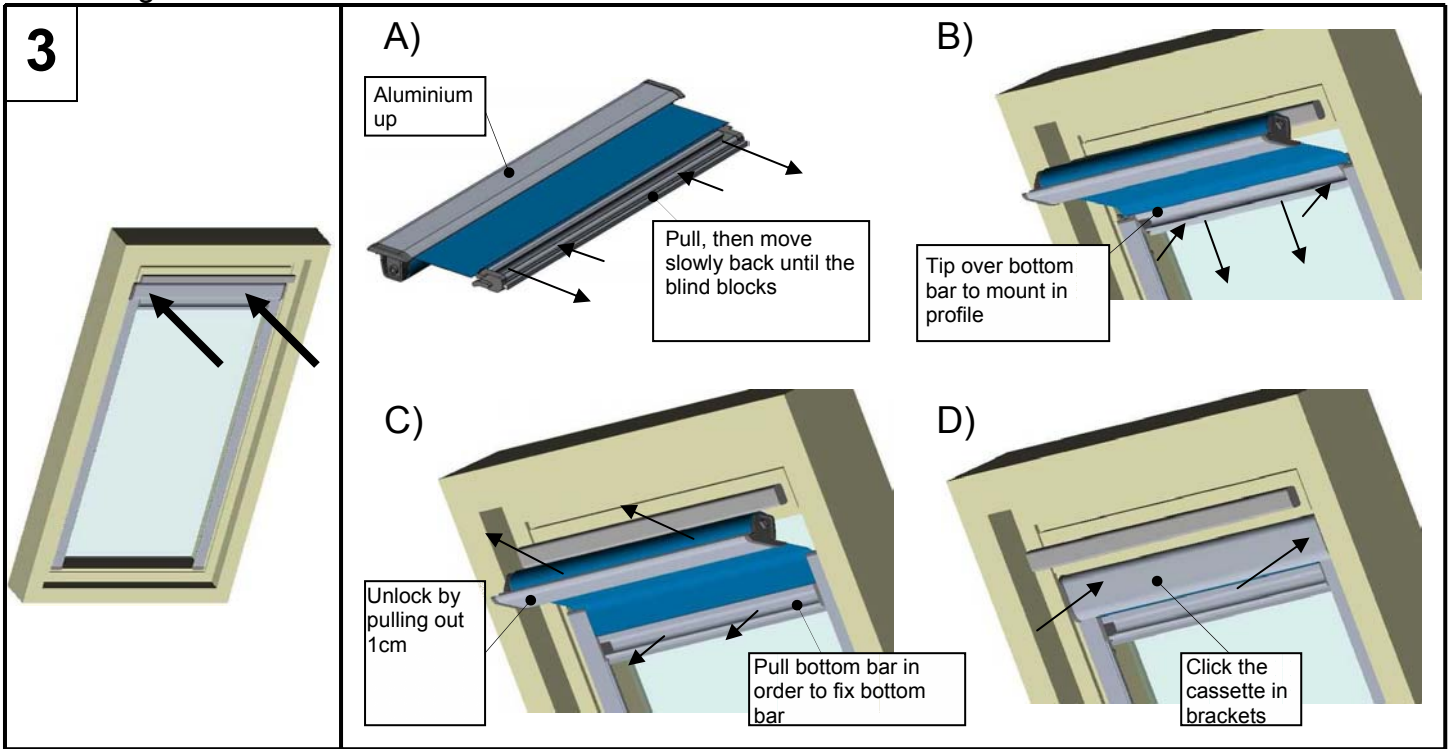
Operation: (moving & blocking)

Moving: Push bottom bar and move up or pull down the blind at the same time.

Maximum tip

blocking: Pull forward bottom bar

Tension the spring

A)

B) Turn and rotate plastic part to bring back tension

When there is enough tension, slowly move back bottom bar to block the blind: Attention, chamfer up; see detail

C)

Detail

Shorten the guides:

For right dimension, look at sticker for your window size

Detail

Chamfer up