

Installation, Operating and Maintenance Instructions

28DCI

LIQUID LEVEL INDICATOR CONTROLLER



T. J. Williams Ltd
Wimborne Road
Barry
Vale of Glamorgan
CF63 3DH
Tel. 01446 729200

January 2005

OPERATION

The 28DCI level control indicator is pre-programmed with 200 fixed points of level. This is to accommodate various types of tank, from vertical tanks to horizontal cylindrical tanks.


Volume is measured in units shown on front panel.

Note!

Alarms are set to percentage of level in tank, not volume.

To cancel Alarm, press MUTE button, alarm light stays lit.


MOUNTING DETAILS

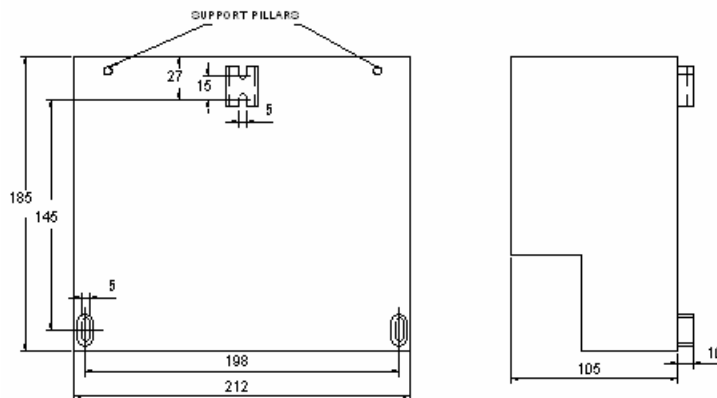

ELECTRICAL

Unit is factory set for **230VAC**. Or as customer request.

For 110VAC remove and link out green connection block as below:

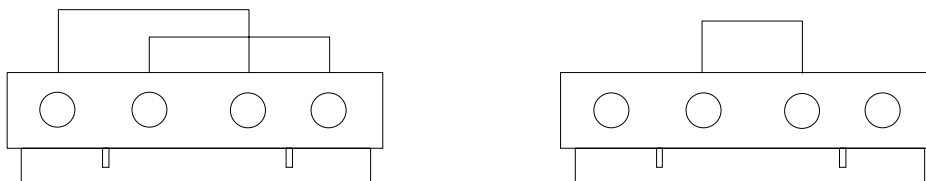

VOLTAGE CHANGE PROCEDURE

1. Unit should be ISOLATED from supply.
2. Remove screws & lift out display panel.
3. Unplug Green terminal plug from right-hand side.
4. Alter connections as fig 1.

TRANSMITTER

Suitable transmission cable for connecting Transmitter and re-transmit unit to Level Unit is 2 core screened 7/0.2

Screen - Connect one end to GND in display unit, but
DO NOT CONNECT other end at Transmitter.

INSTALLATION & SETUP

Mount Unit to a secure surface. Connect Supply to terminals shown in FIG 1.
(CHECK SUPPLY VOLTAGE – SEE ABOVE)

Connect Transmitter to terminals shown in Fig 1.

Fit plug to Transmitter (where applicable).

Switch on supply - LCD reads level at Transmitter position.

Level Alarms 1 & 2 are factory set - L=20%, H=80%, (unless requested different)

To adjust Level Alarms - Press and hold **SELECT** button for 1 sec., release, the display will show '1LXX P' where 1L is alarm 1 LOW and XX is the present set point level in % (P = Percent).

	<u>DISPLAY</u>
Press select for alarm 1 LOW	1LXX P
Press select for alarm 1 HIGH	1HXX P
Press select for alarm 2 LOW	2LXX P
Press select for alarm 2 HIGH	2HXX P
Press select to go back to normal display	
If any alarm setting is 00 then it is deactivated	

Use **ADJUST** button to set new Level Alarm point. If you pass desired point, continue to press button.

